

Quick Start Guide

WE ARE READY TO HELP
support@sineaudio.com.cn



Learn More About Us!

Setting Up Videos:
www.youtube.com/@Saiyin-Riowois



sineaudio.com.cn

Powering on the Speakers -----P1~P2

Setting Up the Speakers with TV via Optical Cable -----P3~P4

Setting Up the Speakers with TV via AUX Cable-----P5

Connecting to the Record Player Via AUX Cable-----P6

Connecting to Source Device via Bluetooth-----P7

Remote Compatibility -----P8

 
Troubleshooting -----P9~P10

Powering on the Speakers


Step 1: Carefully Unpacking the Carton and Confirm that the Following parts are Included




Speaker Wire
(Only for model
DS6801S, DS6701)




Audio Cable

 


Remote

 

Power Cord

 


Optical Cable
(Excludes DS6701NP)

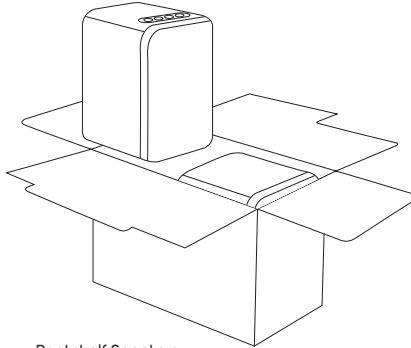 


Bookshelf Speakers
(One Active Speaker, One Passive Speaker)

 Step 2: Connecting the Active and Passive Speakers via the Speaker Cable

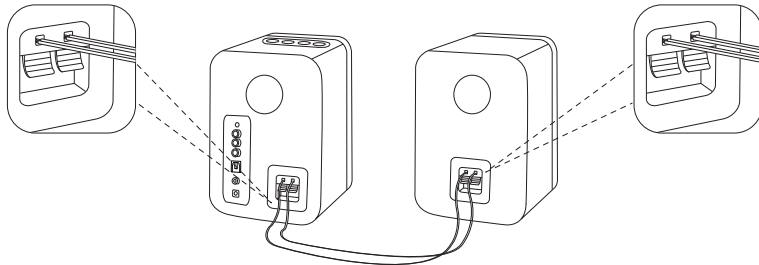

(DS6701, DS6801S)

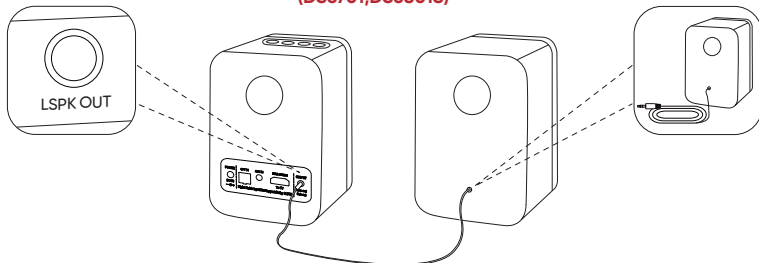 


(DS6701S, DS6701NP, DS6701UP)


Powering on the Speakers

Step 3: Plugging in the Power Adapter

 
Speakers enter standby status and the indicator lights on red

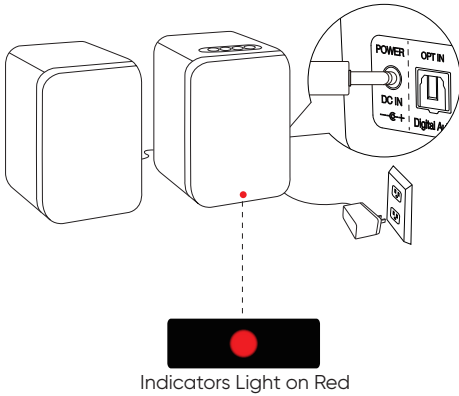

 Step 4: Powering on the Speakers and Entering into Bluetooth Mode

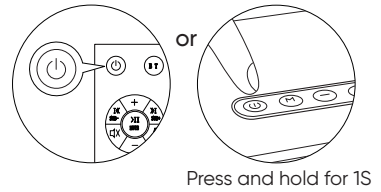


 (Only for Model DS6701NP,DS6701UP)
Indicator Lights on Orange

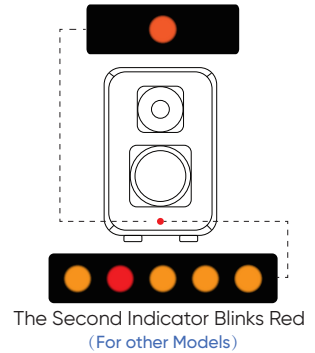


Step5: Selecting the Appropriate Method to Connect the Speakers to your Source Device Based on its Outputs

 (Optical Preferred for TV)

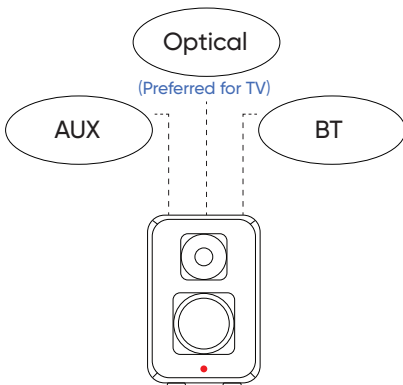


Setting Up the Speakers with TV via Optical Cable

 Step 1: Removing the Protective Caps from both Ends of the Optical Cable

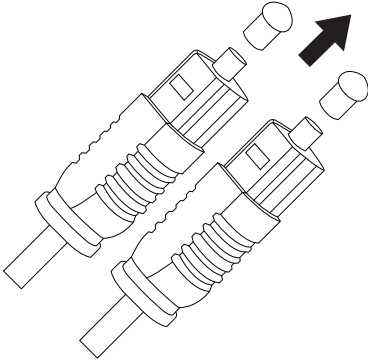


 Step 2: Connecting with Optical Cable

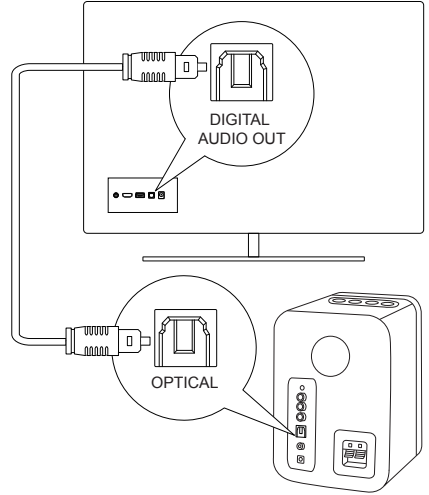


Step 3: Switching the Speakers to Optical Mode

 Press M button on top of the main speaker or OPT button on remote to switch to OPT mode.

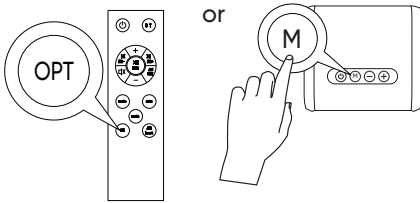

 (Only for Model DS6701NP, DS6701UP)
Indicator Lights on Bright Red

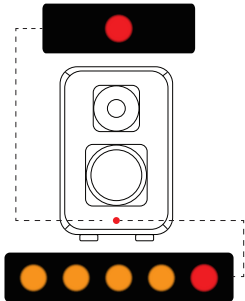


The Fifth Indicator Lights on Red
(For other Models)

Step 4: Set TV Sound Output to Optical

Settings > Sound > Sound Output > Optical

 Different TV brands have varying setup procedures, please refer to your TV's owner's guide for the appropriate setup instructions.

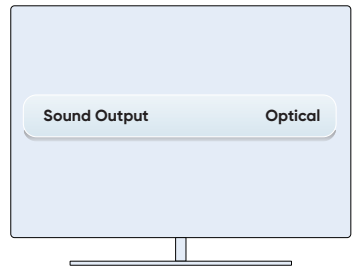


Setting Up the Speakers with TV via Optical Cable

Step 5: Changing Digital Audio Output format to PCM/Stereo


Settings > Sound > Expert Settings > Digital Output Audio Format > PCM/Stereo Sound

 Different TV brands have varying setup procedures, please refer to your TV's owner's guide for the appropriate setup instructions.

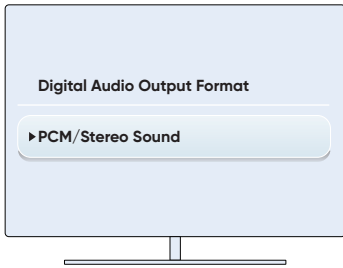


Step 6: Disable the Dolby/DTS of TV

 To avoid silent or noisy output from the speakers, please disable the Dolby/ DTS on your TV.

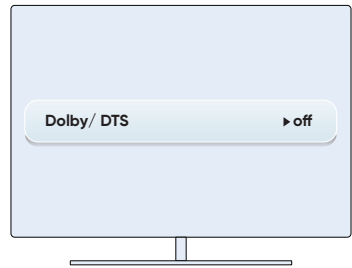


Step 7: Disable the Dolby/DTS on Streaming APP

 To avoid silent or noisy output from the speakers, please disable the Dolby/ DTS on streaming APP like Netflix, Amazon Prime Video, HBO, Hulu, Youtube.etc.

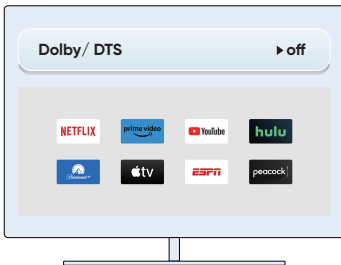


Step 8: Compatible with Fire TV remote

 If you are using a Fire TV stick, follow these steps to control the speakers with your TV remote: Equipment Control>Manage Equipment>Soundbar>Change Soundbar>Meidong.

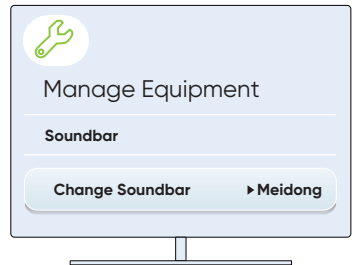


Setting Up the Speakers with TV via AUX Cable

 Step 1: Connecting the Audio Cable

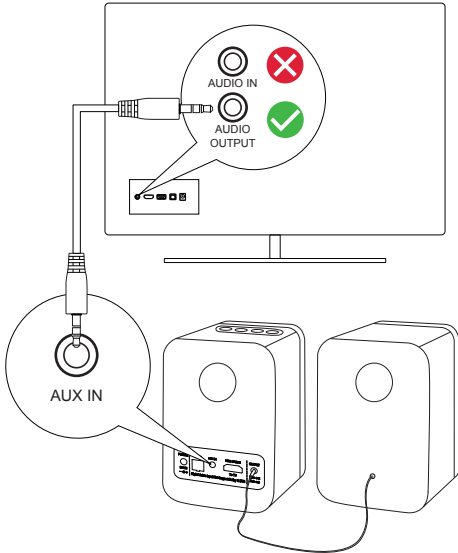


Step 2: Switching the Speakers to AUX Mode

 Pressing M button on top of the main speaker or AUX button on remote to switch to AUX mode.

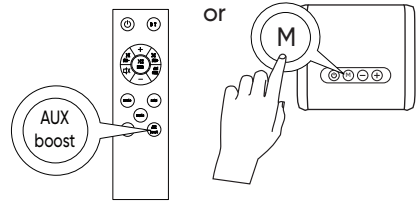

 
(Only for Model DS6701NP,DS6701UP)
Indicator Lights on Green

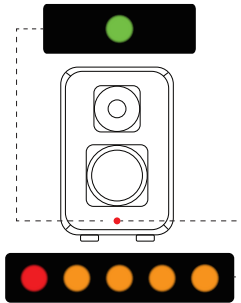


The First Indicator Lights on Red
(For other Models)

Connecting to the Record Player Via AUX Cable

 Step 1: The Speakers can be Connected with Record Player Directly via LINE OUT, while a Preamplifier is Required if the Record Player has only PHONO output.

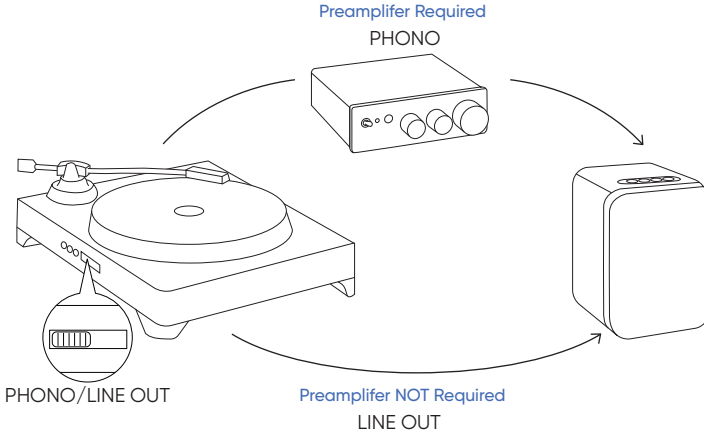


 Step 2: Connecting the Record Player via the Audio Cable

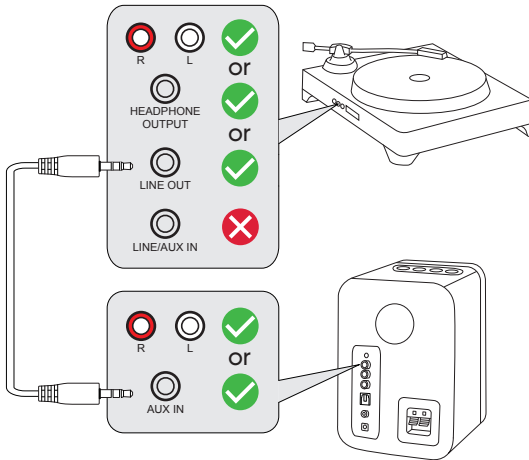


Step 3: Switching the speakers to AUX Mode

 Pressing M button on top of the main speaker or AUX button on remote to switch to AUX mode.

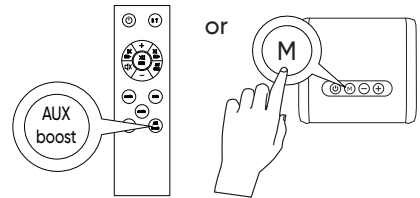

 (Only for Model DS6701NP, DS6701UP)
Indicator Lights on Green

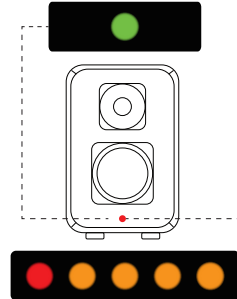


Connecting to Source Device via Bluetooth


Please make sure that your audio source devices are built with Bluetooth transmitter/output like smartphones, TVs and PCs, rather than a Bluetooth receiver/input like Bluetooth headphones, record players with speakers and Bluetooth speakers etc.

Step 1: Switch the Speakers to Bluetooth Mode

 Pressing M button on top of the main speaker or BT button on remote to switch to Bluetooth mode.

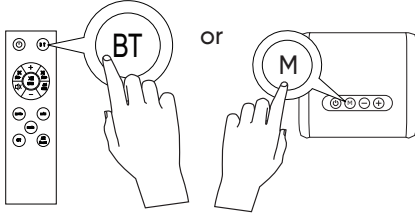

 
(Only for Model DS6701NP,DS6701UP)
Indicator Lights on Orange

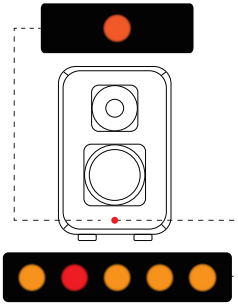


The Second Indicator Blinks Red
(For other Models)

Step 2: Connecting to the Source Device via Bluetooth

 Open your device's Bluetooth settings and select SineAudio DSXXXX V1.X to connect with the Speakers.

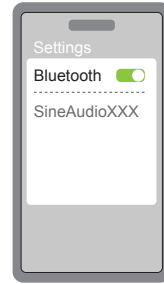

33feet(10M)

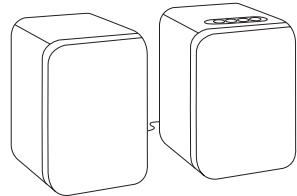 

Step 3: Indicator Light Instructions

The orange light flashes quickly means bluetooth is ready for connection(for model DS6701NP,DS6701UP).
The red light flashes quickly means bluetooth is ready for connection(for other models).

The orange or red light flashes slowly means bluetooth is connected while no audio is being played.

 
Step 4: If Audio and Video Out of Sync

If the audio is not synchronized with the video in Bluetooth connection mode, you can try adjusting the audio output delay in your TV settings. (Depends on your TV)

Step 5: Disconnect Bluetooth Quickly

If you want to connect another Bluetooth device, please press and hold BT button or M button on soundbar for one second to disconnect bluetooth from the current device.


Step 6: Please max the volume of TV or other audio sources, and then adjust the volume of soundbar

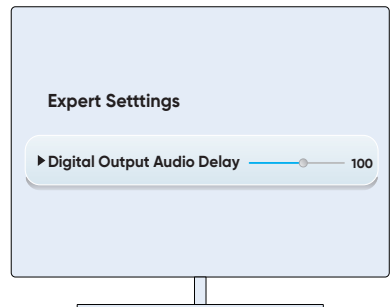

(Refer to your TV's manual for more information)

Remote Compatibility

 
1: How to Pair Fire TV Remote with Speakers Remote

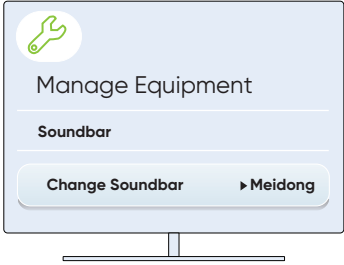

If you are using a Fire TV stick, follow these steps to control the speakers with your TV remote :
Set>Equipment Control>Manage Equipment>Soundbar>Change Soundbar>Meidong

2: Remotes compatible with Roku box or Roku TVs are provided for free

 
Please contact us via after sales email support@sineaudio.com.cn to get one!

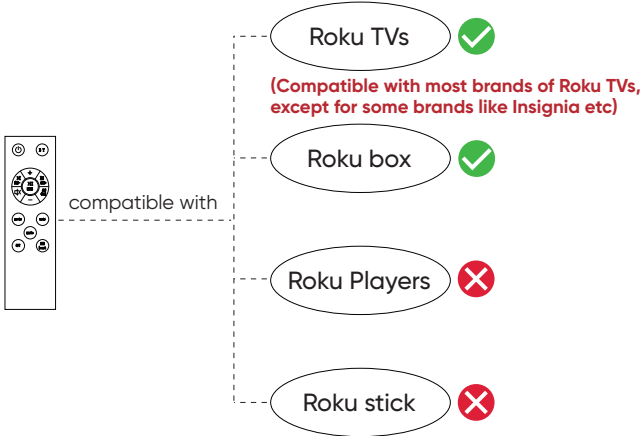


Troubleshooting

1: It is recommended that the volume of the source device set greater than 50%, and then adjust the volume of the speakers.

 The Built-in speakers of turntable may not turn off. When our speakers are connected to the Line Out of the turntable. However, the Built-in speakers of turntable will turn off automatically when our speakers are connected to the turntable via Headphone Out.

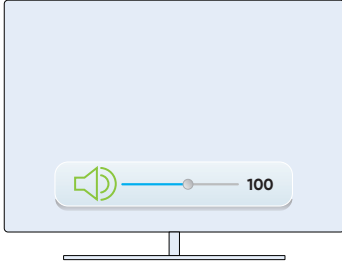


2: Static and Noise

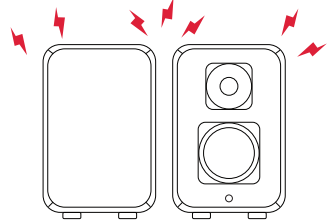 

When there is noise after the speaker is connected to the TV via optical connection:

- ① The speaker does not support Dolby and DTS, please kindly disable the Dolby and DTS on both of your TV and video streaming apps like Netflix, Amazon Prime Video, HBO, Hulu, Youtube etc.
- ② Please try setting TV digital audio output format to PCM or Stereo.
- ③ Select external speakers or turn off the TV speakers.

 3: Can't Power On

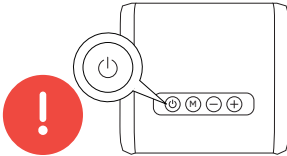

① If the speakers will not power on, please check whether the power-on button on the main speaker is stuck, or the power adapter is properly plugged into socket.

 
② Please contact us via after sales email: support@sineaudio.com.cn

When there is noise after the speaker is connected to other devices via AUX connection.

- ① In order to reduce the bottom noise at low volume, please do not minimize the volume of the audio source, it is recommended that the volume of the audio source set greater than 50%, and then adjust volume of the speakers.
- ② Make sure that the cables are fully and properly plugged into audio source and speakers.
- ③ Contact us via support@sineaudio.com.cn

Troubleshooting

4: Remote Stops Working

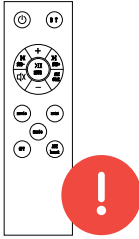

- ① Please contact us via: (support@sineaudio.com.cn) to get a free replacement remote control. (The remote does not come with batteries)
- ② The IR code of the remote control is not compatible with universal remotes or TV remotes. (The remote is compatible with Fire TV remote by choosing "Meidong" as brand of speakers).

6: Sound Quality Issues



If you feel the bass is too heavy or the vocals are not enough, press the music or news button on the remote control.

If distortion or sound quality problems occur, please contact with our customer service in time. (support@sineaudio.com.cn)

7: Stops working

The product comes with a complimentary one-year replacement policy.

If you experience any issues or if the product you received stops working within a year, please reach out to our customer service team to get a free replacement. support@sineaudio.com.cn

5: Bluetooth Connection Issues



- ① Please make sure the speakers are not connected with any other Bluetooth devices. If the speakers are connected with smart phone via bluetooth, you will have to press and hold BT on remote for one second to disconnect and then connect with other device again.
- ② More problems please contact us via: support@sineaudio.com.cn
- ③ Optical cable is preferred to connect with your TV as Bluetooth connection may cause audio delay.
- ④ If the Pause/Start button is not working under Bluetooth mode, It is probably due to that the source devices do not support Bluetooth AVCRP protocols.

8: Three Sound Effects

	Treble	Vocal	Bass	Virtual Surround
Movie	+	-	Deep	++
Music	-	+	Powerful	+
News	-	++	Weak	-

Three sound effects are designed for three different scenarios to ensure that these effects sound good in their respective applications.

We minimized the differences between them because if the differences were significant, it could result in either low volume due to attenuation or high distortion due to excessive enhancement.

If you have any comments or suggestions, please contact us, we will continue to optimize and improve our sound algorithms! (support@sineaudio.com.cn)